


WALLTOPIA

QUANTUM BOARD XL

HOLDS INSTALLATION

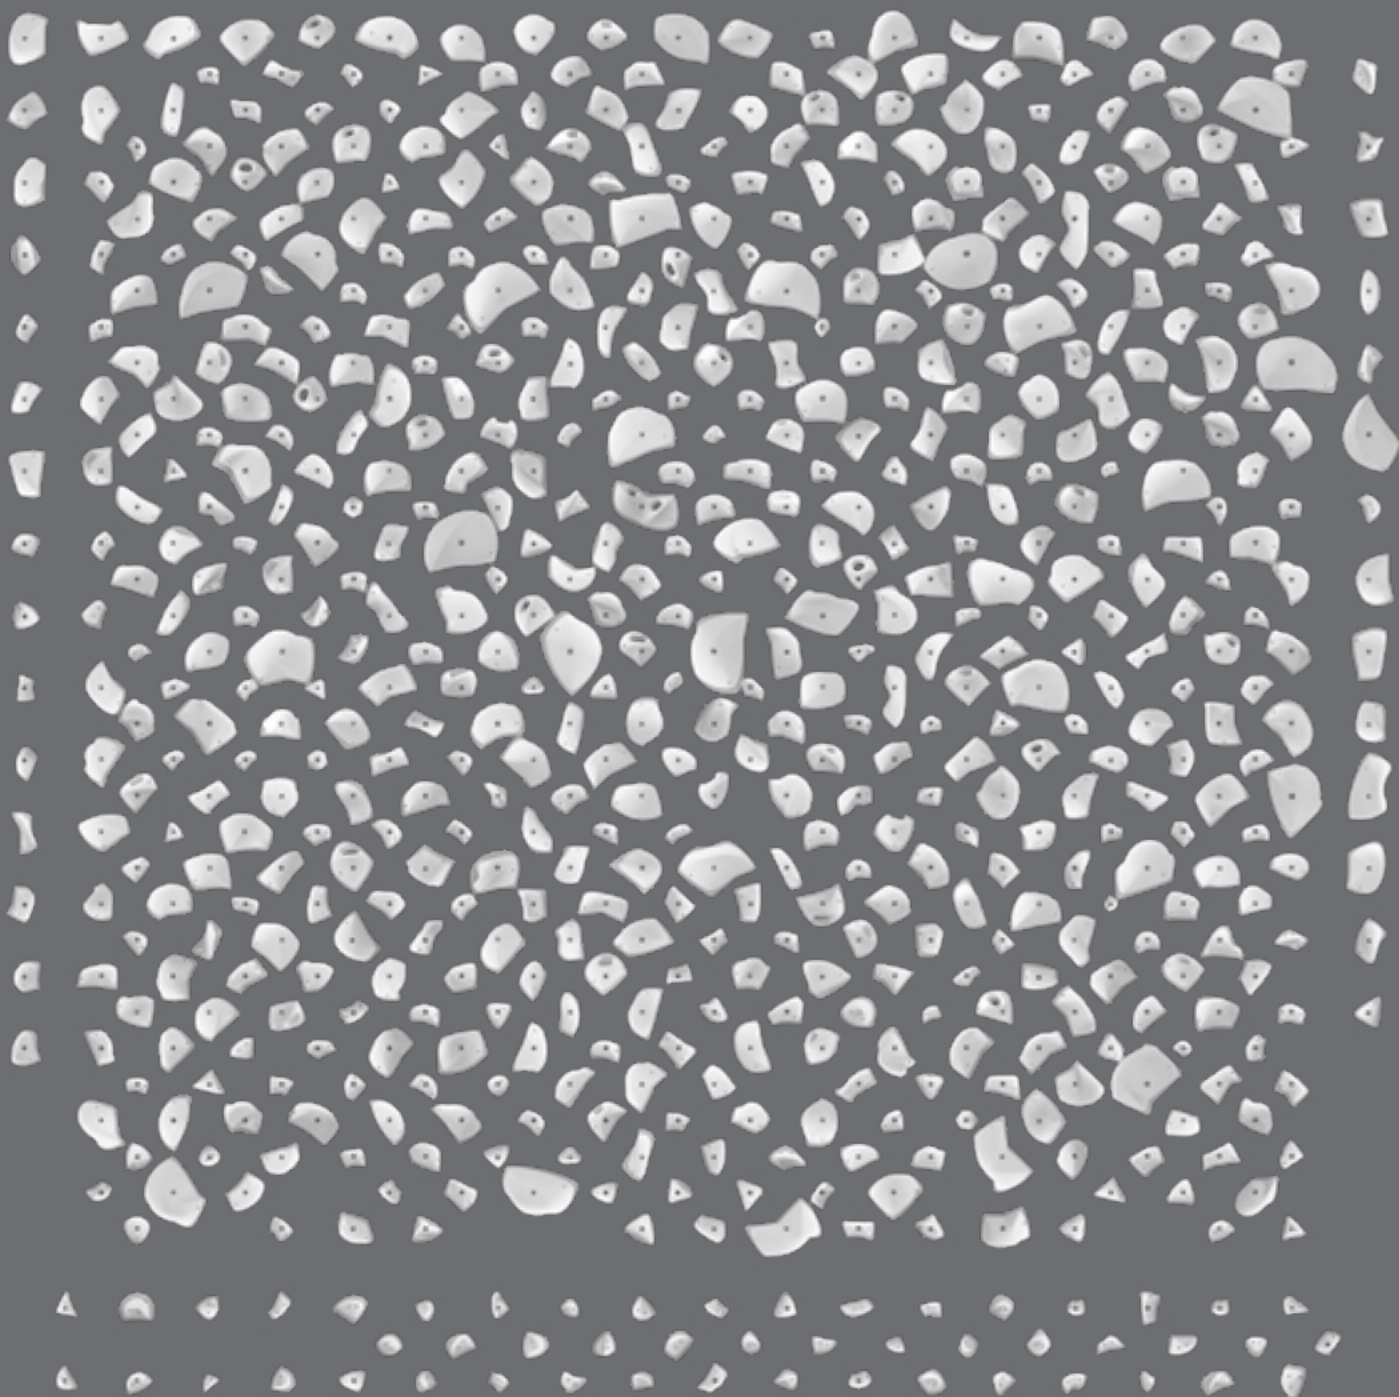

1.

How to start?

I just installed my board, what now?..... page 01

2.

Climbing holds

Indicators page 05

Example 1 page 07

Example 2 page 09

Exception Hold 282 page 12

Exception Hold 294 page 15

3.

Routesetting

Quick and Easy..... page 18

Table 1 page 19

4.

LED Installation

Parts & Basic Instrucutions page 21

Example 1 Line 1 page 23

Example 2 Line 2 page 26

LED Diagram page 29

1. How to start?

I JUST INSTALLED MY BOARD WHAT NOW?

Don't worry, everything will be alright because you have this manual for the holds installation.

First, we will explain the fastest way to install all of the holds and how to organize your work in the most efficient way possible.

If you have any ideas on how to improve the process or would like to share anything else with us about the installation of the board, you can send us an email at **quantumboard@walltopia.com**.

STEP 1 — UNPACKING THE HOLDS

Sort the unpacked holds in 12 piles:

- 8 piles for the main panels;
- 2 piles for the kickboard panels;
- 2 piles for the side panels.

Use **Table 1** to find the place of each hold and sort them accordingly.

STEP 2 — LEARN ABOUT THE INDICATORS

Both the board and the holds have specific indicators to ensure correct placement.

Before you begin, make sure to read **Step 2: Climbing Holds**, where you'll find examples of how to position the holds on the board.

STEP 3 — ROUTESSETTING

In Step 3: Routesetting

Open **Table 1** in a separate window to find all of the hold locations and directions easier. If you have more time you can separate the holds by panels.

STEP 4 — LED INSTALLATION

After all of the holds are in place. Put screws in all of them. We recommend using torx T25. When you are ready with this, then start setting up the LED Controller and the LEDs, otherwise you might damage a LED.



2. Climbing holds

Example 1

I JUST GOT MY HOLDS WHAT NOW?

If everything is in order and your shipment has arrived, you should now be surrounded by 641 climbing holds.

Now comes the really fun part.


There are two types of holds in your set:

- Holds with Bolts
- Holds without Bolts

THE INDICATORS ON THE BOARD

Once you locate the position, you'll see the **hold number** and **two lines**. The arrow on the hold with the number must match with the engraved line on the board.

- **Line 1** indicates South.
- **If there is a second line on the board then match the arrow with hold number with it.** indicates the other directions, which can be North, Northeast, East, Southeast, Southwest, West, or Northwest.

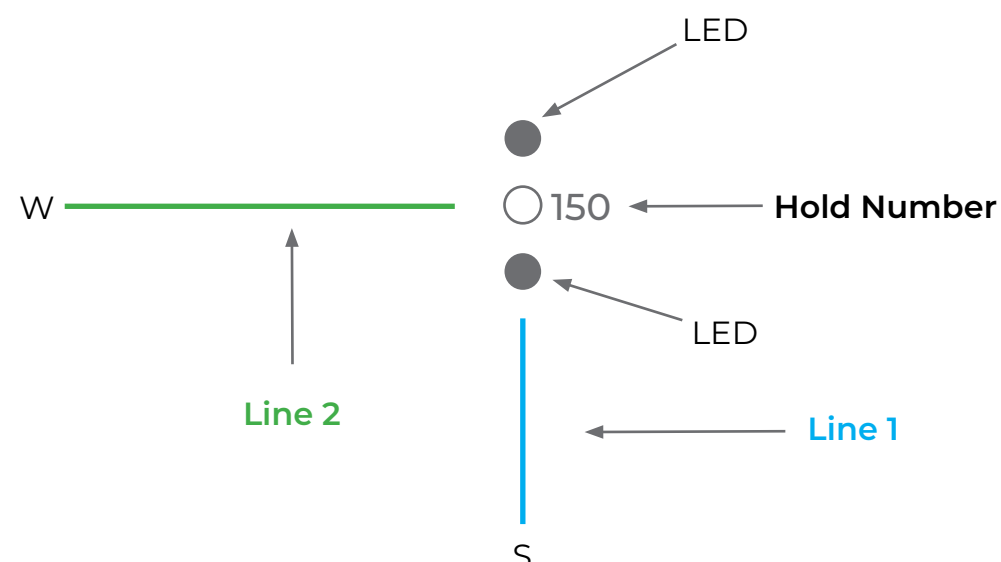


- ❗ If the hold is pointing South, there will be only one line on the board and one indicator on the hold.

THE INDICATORS ON THE HOLDS

We wanted to make the setting of the board as easy as possible but also make sure that all the holds are pointing in the correct direction.

This is why each hold has 2 indicators:

- The “500” logo
- **Arrow** which shows the number of the hold and points to the direction of the hold.

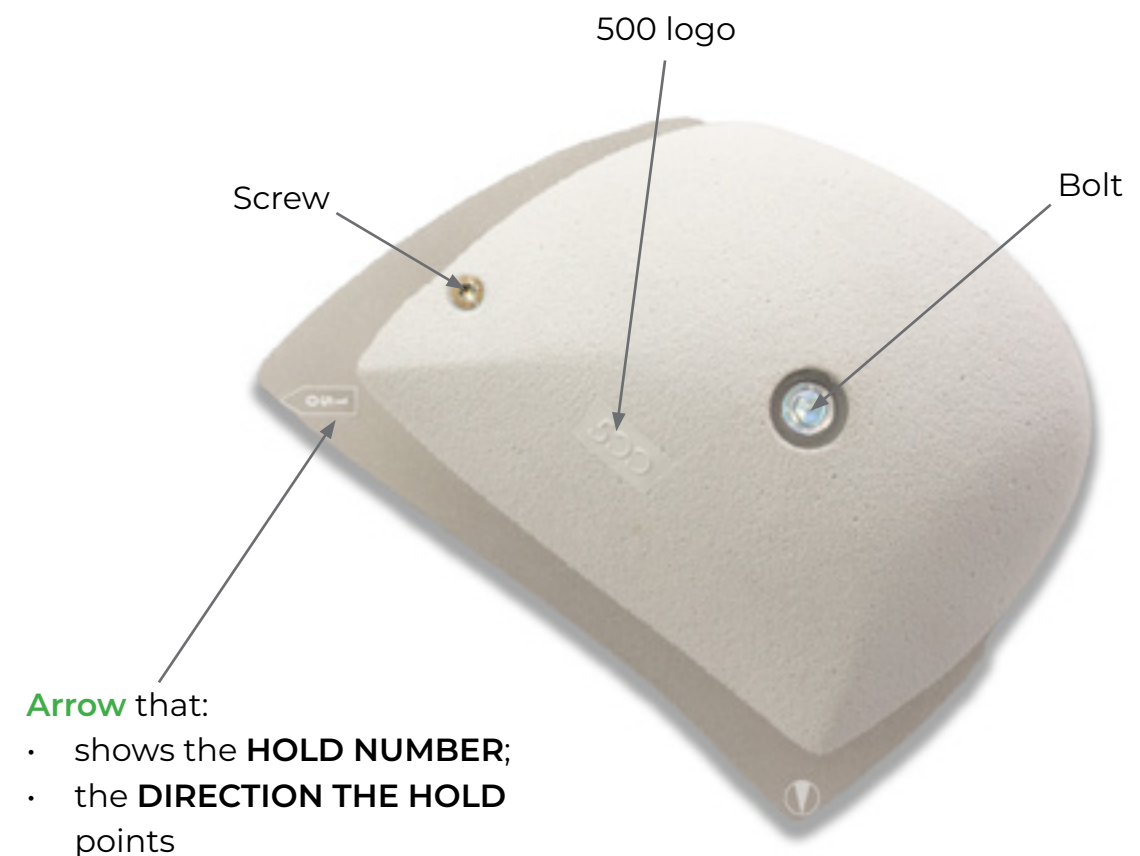

In the example on the next page you will see how to align holds with bolts with the lines on the board.


2. Climbing holds

Example 1

HOW TO SET HOLDS WITH BOLTS

Each hold has a specific position on the board. Find the position of the hold in **Table 1**.

Once you find it in the table, locate the hold on the board. In this example we will be using hold 150.

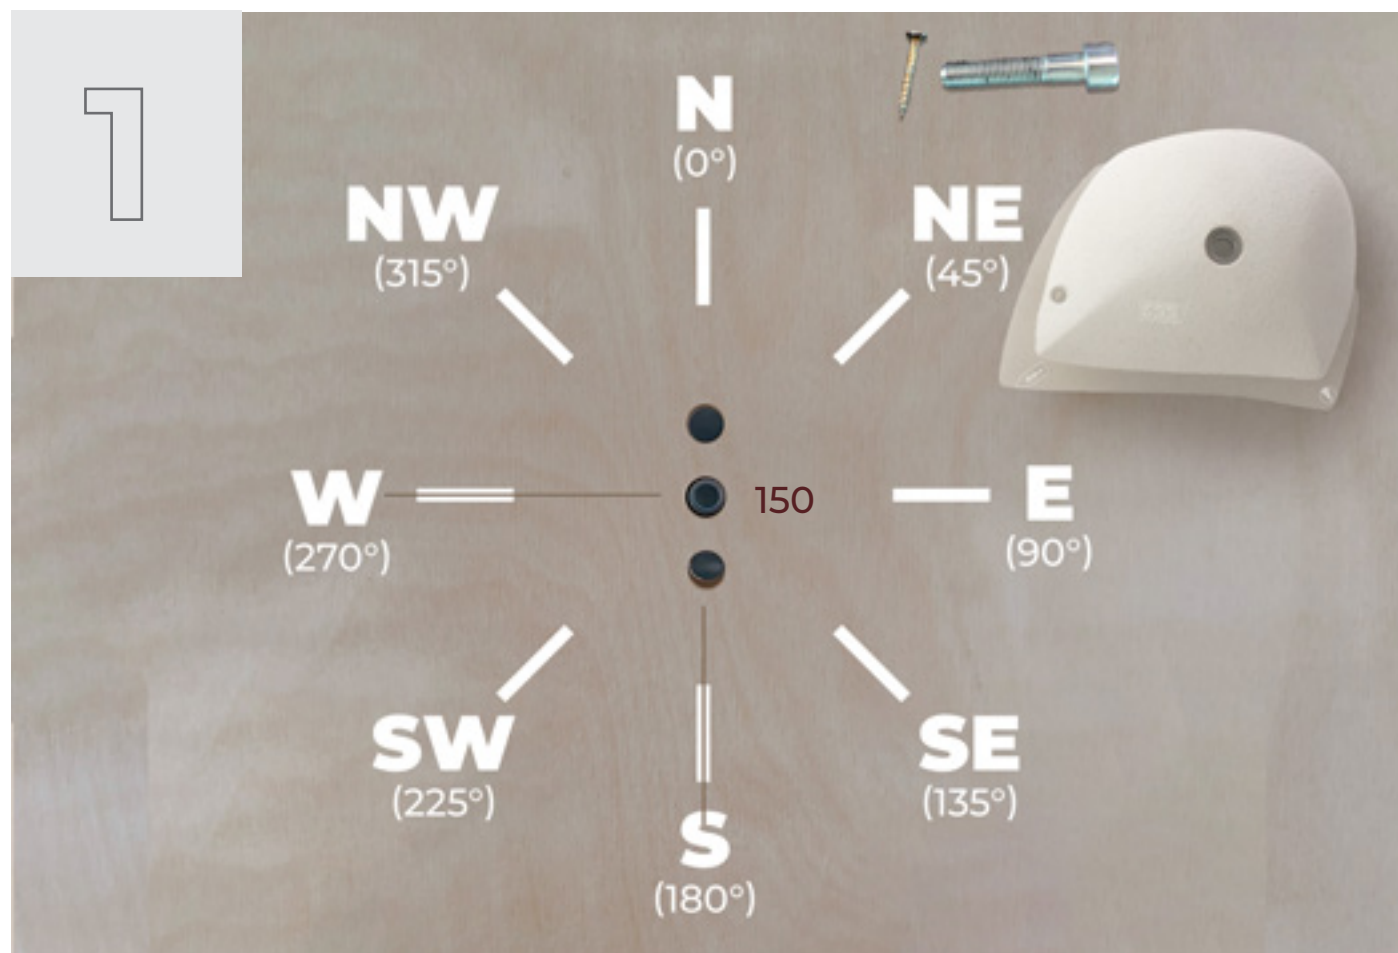

The first thing to do is find hold 150 in **Table 1**. Hold 150 is placed two times on the board. I decide to put it first on panel 1 and I see that it says 150 W in the table. This means that hold 150 is pointing West. I find the engraved number of the hold on the board - 150 and can see that **Line 2** is pointing West.



Take the hold and put a bolt inside it, then place it on the board.



Align the **Arrow** with **Line 2**.


2. Climbing holds

Example 2

HOW TO SET HOLDS WITHOUT BOLTS?

Each hold has a specific position on the board. Find the position of the position of the hold in **Table 1**.

Once you find it in the table, locate the hold on the board. In this example we will be using hold 113.

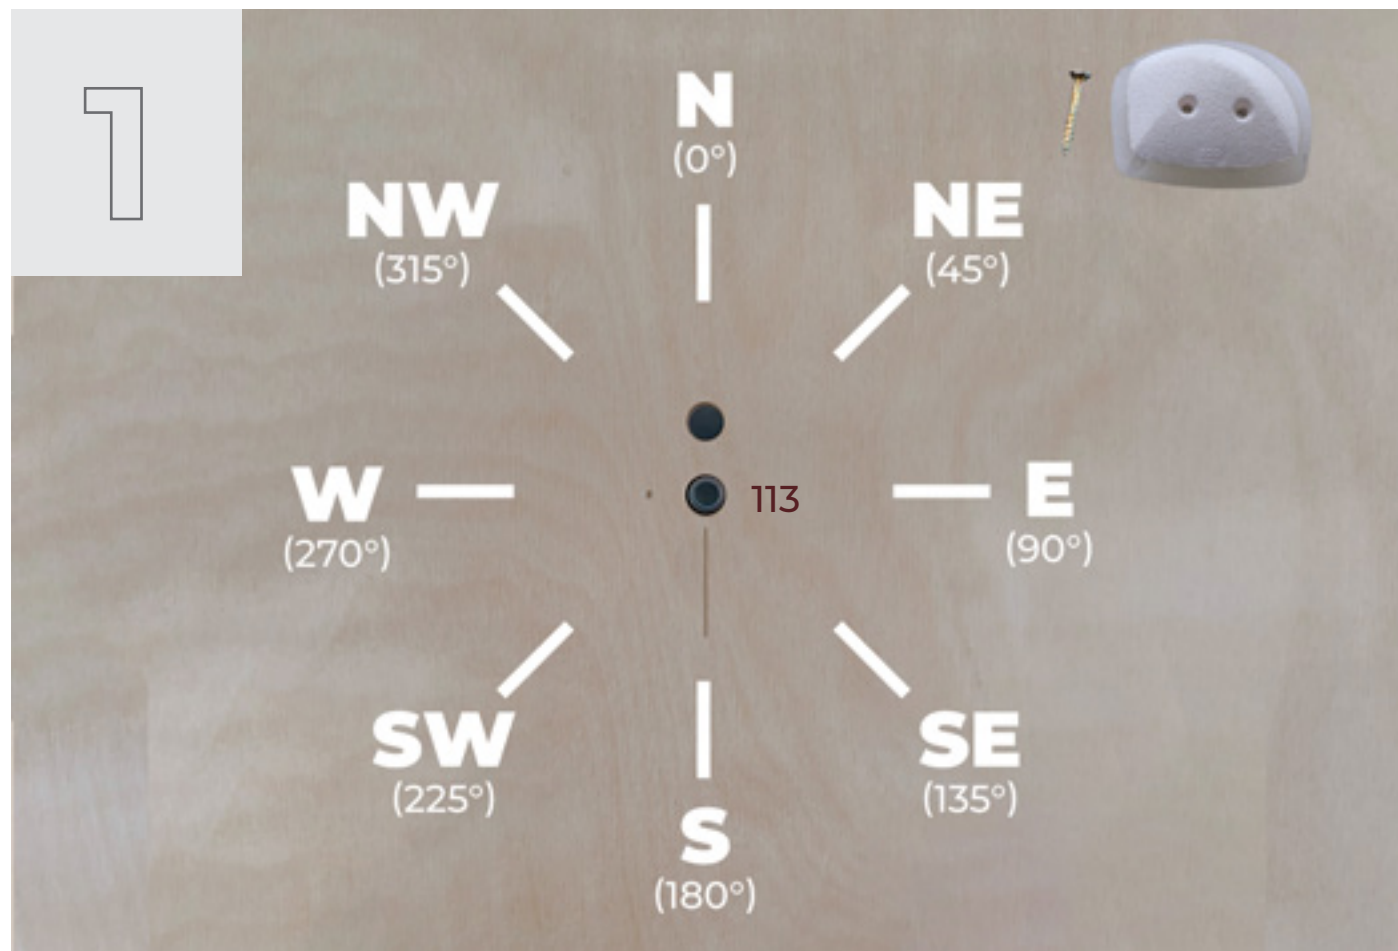

The first thing to do is to find hold 113 in **Table 1**. Hold 113 is placed only once on the board and I can see that in **Table 1**. It's 113 S which means that the hold is pointing South. Therefore there will be only one indicator on the board and on the hold.



Because the hold has no bolt, we have engraved an additional dot on the board. This will make screwing on the hold easier.



You take the hold. Put the screw inside in the hole **LEFT** of the **500 logo** and position the screw on the dot.

4



Align the **Arrow** with **Line 1** and screw in the screw.

5



Put a second screw in and you're ready.

2. Climbing holds

Exceptions

EXCEPTIONS — HOLD 282

This is how to set hold 282 on the board. This hold is an exception. There are only two exceptions with holds on the entire board.


1



Hold 282 is pointing East. Because the hold has no bolt, we have engraved an additional dot on the board. This will make screwing on the hold easier.



You take the hold. Put the screw inside in the hole as shown above.

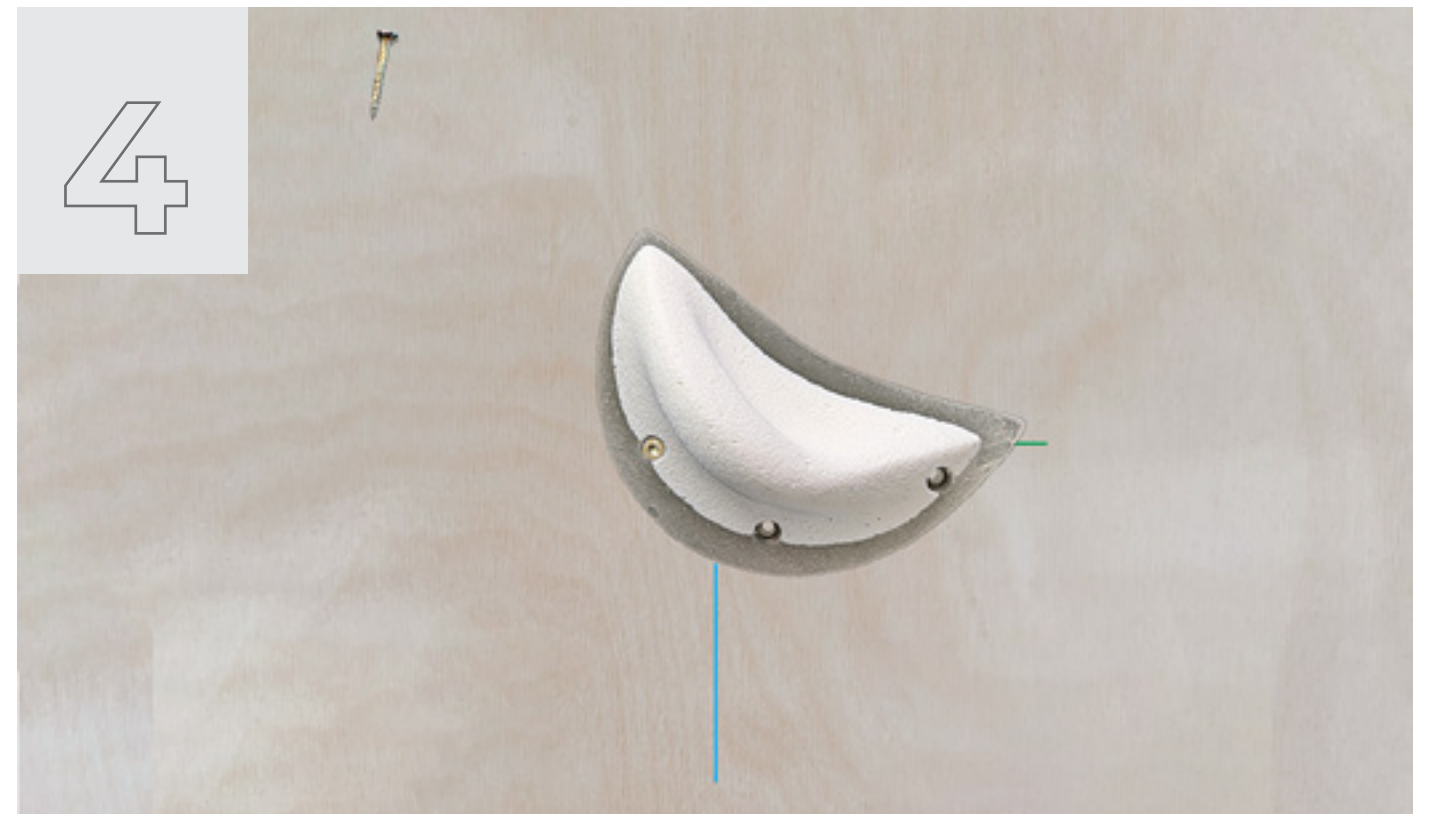

When its aligned screw it in and then add two more screws.



Align the **Arrow** with **Line 1** which is pointing East.



This is what the hold should look like in the end.

2. Climbing holds

Exceptions

EXCEPTIONS — HOLD 294

This is how to set hold 294 on the board.



Hold 294 is pointing South East. Because the hold has no bolt, we have engraved an additional dot on the board. This will make screwing on the hold easier.



You take the hold. Put the screw inside in the hole as shown above.



Align the **Arrow** with **Line 1** which is pointing South East.

5

17

3. Routesetting

QUICK & EASY

The board is divided into 12 panels: 8 main panels, along with 2 kickboard panels and 2 side panels.

Keep in mind that there are holds that are repeating on the board.

Panels Scheme

[illegible]

Table 1

		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33				
LS																																			RS			
1	471 NE	444 E		432 SW		460 S		325 W		436 W		466 SE		447 S		305 E		526 SE		463 W		021 SE		517 SW		387 E		232 SE		357 W		462 E		438 SE				
2			x		019 SE		288 W		019 S		068 E		184 SW		291 E		159 SW		xx		224 SE		150 W		440 SW		366 E		396 E		162 SW		xx		176 SE		307 NE	
3	353 E	441 S		364 N		215 SE		028 E		036 S		474 E		290 N		329 W		415 NE		372 W		338 SE		315 SW		458 N		001 SE		206 S		277 NW		512 W				
4			015 W		269 W		235 E		314 SE		448 SW		067 E		340 W		397 NW		004 S		239 S		355 SE		467 W		445 NW		399 NE		461 W		341 SW		109 E		293 SE	
5	428 SE	174 W		435 E		352 S		430 SW		071 SE		479 S		359 W		058 W		011 SE		227 SE		403 NW		011 S		210 SE		220 S		298 S		210 SE		369 NW				
6			527 W		178 E		391 E		475 E		402 SW		025 E		509 SE		514 SW		485 S		025 SE		226 S		273 SW		264 S		481 S		468 W		196 E 7		108 NE		219 NW	
7	295 S	163 S		011 E		040 W		519 W		140 SE		003 SW		048 SE		152 SW		303 E		026 S		002 S		440 NE		502 SE		365 S		166 S		214 SE		396 E				
8			257 SW		524 SW		102 E		003 SW		356 SW		507 E		452 SE		281 SW		390 NW		492 SE		339 SW		147 S		019 SE		145 S		249 SW		013 SE		517 NW		368 S	
9	044 E	143 SW		xx		225 SE		046 W		247 SE		027 W		002 SW		393 S		245 NE		327 SE		085 N		251 SW		348 NW		521 SW		362 NE		365 S		343 E				
10			439 W		312 SW		212 W		496 SW		042 SW		304 W		431 SW		356 NW		342 S		417 NW		404 SW		422 SE		112 SE		326 SW		489 SE		451 NW		508 SW		104 N	
11	395 NE	246 SW		442 N		454 SW		352 E		436 N		332 NW		238 SE		029 SW		037 SW		002 SW		510 SE		140 SE		327 SE		413 S		437 SE		282 E		119 N				
12			376 NE		007 SW		133 W		384 SW		334 SW		301 SE		096 S		493 SW		098 E		321 SE		218 W		255 S		487 SE		457 NE		404 S		277 NW		259 S		525 N	
13	480 SE	335 SE		069 W		446 S		177 W		499 SW		223 E		287 NE		xx		181 SW		213 SE		146 SW		137 N		291 SE		008 SW		151 SW		504 SW		373 NE				
14			388 NW		280 SE		375 N		107 N		050 SE		208 NW		110 E		351 NW		184 SW		105 SE		465 W		250 W		412 SE		347 SE		xx		034 W		032 SW		094 NW	
15	118 SE	143 S		382 E		095 SE		270 S		354 NE		522 SW		129 SW		409 S		003 SW		443 E		424 SE		101 N		027 S		286 S		026 SE		229 SE		233 SE				
16			253 SE		294 SE		335 S		147 SE		xx		026 S		386 W		310 S		106 W		021 S		302 S		262 SE		506 SW		433 E		420 S		070 SE		374 S		472 SE	
17	127 SW	090 S		363 SW		002 SW		299 W B		349 S		414 SW		330 E		277 NW		188 SE		xx		497 W		450 SW		099 SW		043 S		180 S		211 E		034 SW				
18			100 E		483 SW		518 SE		276 NE		158 SW		425 SE		528 S		297 S		503 NE		263 NW		005 S		379 NE		182 E		134 NE		389 NE		324 NW		265 S		464 SW	
19	018 SE	419 N		109 E		007 S		139 W		449 E		311 SE		053 N		135 SE		124 SW		012 SE		486 SW		481 S		345 S		501 SE		371 NW		039 S		156 S				
20			279 W		237 S		355 SE		478 W		288 W		434 SW		401 N		498 S		421 NE		190 SE		013 SE		009 SW		130 E		048 SE		473 E		236 SE		456 S		488 SE	
21	115 S	429 NW		017 S		017 S		107 SW		199 SW		023 S		494 S		244 E		405 S		400 NE		309 SW		292 SW		241 E		319 S		407 W		161 NW		149 E				
22			306 S		187 E		383 S		336 S		267 SW		062 NW		189 E		477 SE		300 S		427 S		284 SW		064 SE		458 N		476 NE		201 W		453 E		511 S		500 N	
23	103 N B	470 E		071 NE		455 SW		141 S		145 S		038 W		394 SE		010 SE		121 E		xx		185 SW		317 W		065 SE		398 SW		037 SW		033 S		040 SW				
24			144 S		495 SE		252 S		333 S		346 N		423 SW		378 NE		150 W		505 E		370 NW		008 SW		260 S		175 S		274 NE		516 SW		484 SW		407 W		471 SW	
25	193 NW	322 N		448 SW		006 SE		202 SE		216 S		007 S		164 SE		243 SE		160 S		200 NW		337 NE		256 W		361 N		469 SW		020 N		198 SW		380 SW				
26			023 S		296 S		491 S		234 N		272 NE		482 S		367 SE		360 E		024 S		010 SE		320 S		171 NW		001 S		527 NE		008 SW		157 SW		052 E 6		289 N	
27	167 SE	179 SE		254 SE		203 E		154 SW		418 N		153 SE		191 S		313 S		018 NE		344 SW		358 S		228 S		004 S		230 NW		268 E		323 S		192 W				
28			350 SE		490 S		331 NW		013 W		142 SE		136 S		410 S		316 NE		116 N		197 SE		081 SE		093 SW		328 SE		242 S		231 E		258 SW		007 SW		119 W	
29	165 SE	194 NW		217 E		114 SE		012 E		271 S		416 SW		431 SW		142 SE		186 S		426 SE		318 SW		285 N		240 S		225 E		137 N		085 E		041 SE				
30			016 SE		126 N		022 SW		047 E		133 W		120 S		209 S		439 S		411 S		x		205 E		128 S		204 SE		442 N		515 S		155 S		221 S			
31		441 SE		459 S		279 SW		266 W		381 NW		248 S		045 W		308 S		022 SW		385 W		498 N		047 SE		107 E		454 E		x		411 NW		275 SE				
32			127 E		120 N		406 NE		021 SE		168 SE		106 NE		053 N		408 N		207 NW		058 W		377 E		172 SE		513 N		278 S		173 S		195 SW		148 N			
33		015 N		501 N		392 N		x		014 N		170 S		523 NW		138 W		134 SW		139 NW		x		520 S		x		x		126 N		135 SE		283 NE				
34			111 S		x		014 S		183 NW		130 E		x		x		129 W		169 NE		513 W		222 SE		116 N		261 NE		125 E		x		054 NE		069 W			
35		068 N		082 SW		132 W		099 N		117 S		059 S		005 E		060 SE		083 N		123 N		106 N		089 NE		097 SE		072 S		020 NE		030 NE		020 NE		067 NE		
36			x		x		x		079 E		056 E		080 SW		061 N		113 S		073 N		088 SW		075 NE		077 N		074 N		091 E		131 NW		066 S		035 N			
37		070 N		054 E		055 N		078 N		138 W		057 E		092 W		125 E		087 SW		049 N		076 SE		031 NE		063 S		084 E		122 SW		051 E		086 E		112 NE		

4. Controller Set Up

PARTS & INSTRUCTIONS

LED CONTROLLER PARTS

After placing all of the holds, the next step is to set up the LEDs and the control box and then connect to the eWalls app. In order to light up the whole board you have to connect 6 lines of LED string cables to a control box, which will then be connected to the power.

For the set up of the LEDs you will need the following parts:



LED Controller
(1x)



Power Cable
(1x)



dividing cable
(5x)




extension cable
(6x)



LED Strings
(14x)


CONNECTING CABLES

Male End



little pin


Female End



- ❗ All of the cables have two different types of outlets: one male and one female. It's easiest to connect them when you first indicate the little pin inside the male end and match it to the female end.
- ❗ CAREFULLY CONNECT BOTH ENDS OF THE CABLE. IMPROPER INSTALLATION MAY DAMAGE THE ENTIRE SYSTEM ONCE THE POWER CABLE IS PLUGGED IN.

LED DIAGRAM

This is the diagram of the LEDs that you will use to install them. You will also find it in the attached files. As you can see there are 6 lines.

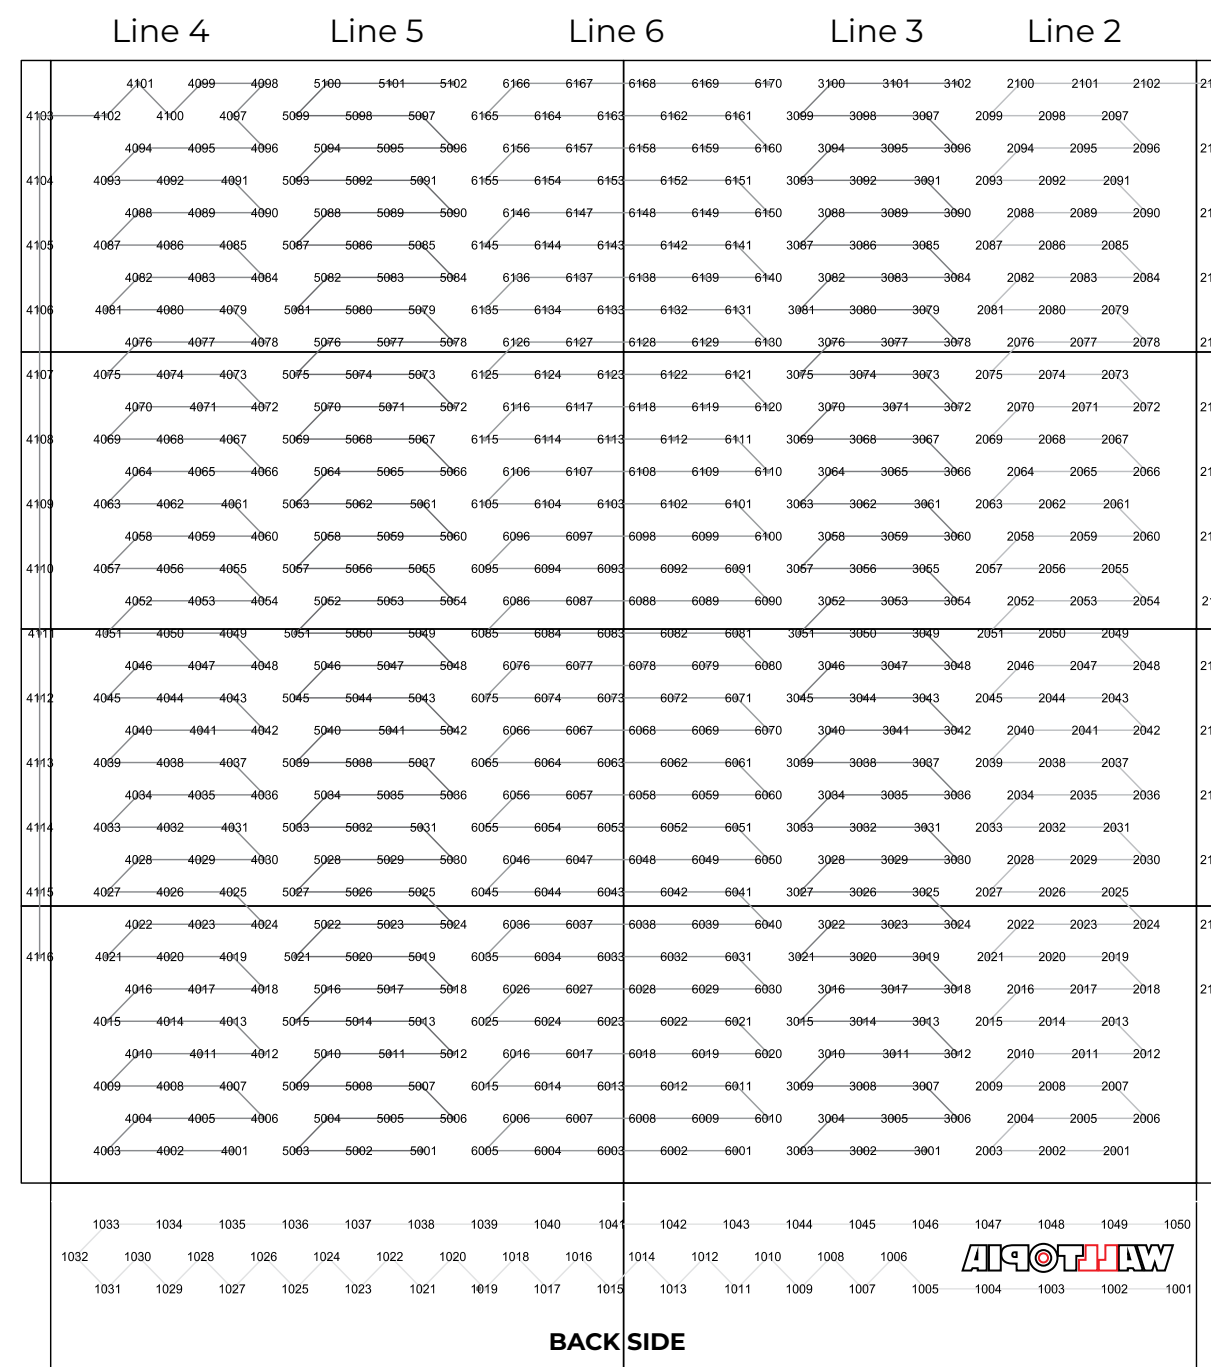

Line 1 is the only line that has just one LED per hold. All the other lines 2,3,4,5 and 6 have two LEDs and you will need to use a dividing cable at the start of the line.

Each LED has a specific position it's very important that you DO NOT miss LEDs on the line. If you do, you have to go back and put in the LED.

4. Controller Set Up

Example 1

Line 1

1



This is the Quantum Board LED Controller Box. It has 6 lines that you have to connect with cables to it. In this example we will show you how to connect Line 1.

2



First we take the LED Controller Box from Step 1 and an extension cable, labeled "Line 1 Start".

3



All of the cables have two different types of outlets: one male and one female.

- ⓘ CAREFULLY CONNECT BOTH ENDS OF THE CABLE. IMPROPER INSTALLATION MAY DAMAGE THE ENTIRE SYSTEM ONCE THE POWER CABLE IS PLUGGED IN.

4




Control Box

Extension Cable
Line 1


Connect the male end of the extension cable, labeled "Line 1 Start" to the first outlet in the LED Control Box.

5

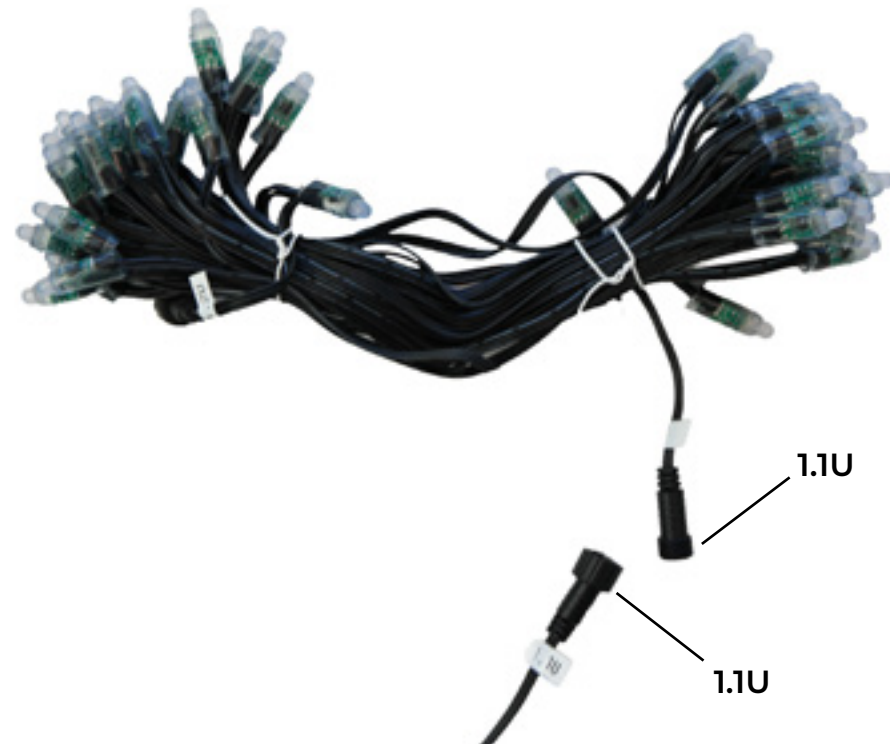

The LED Strips have two ends as well, one of them is labeled 1.1 U and has to be connected to the extension cable. You will need just one LED String for the first line.

6

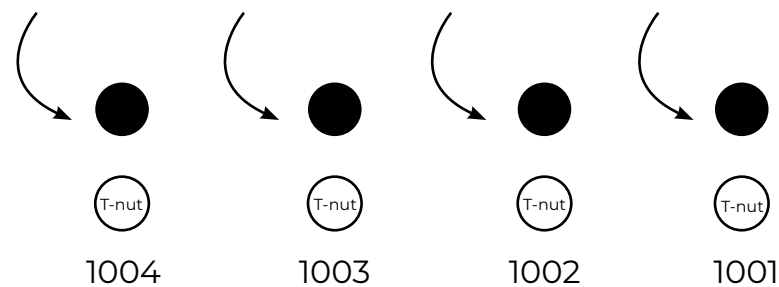

Unlike the other five lines, Line 1 has just one LED per hold position, located directly above the t-nut. Start by taking the first LED connected to the extension cable, which is LED 1001, and insert it into the first position (1001). Continue inserting the LEDs until you reach position 1050.

4. Controller Set Up Example 2 Line 2

1



This is the Quantum Board LED Controller Box. It has 6 lines that you have to connect with cables to it. In this example we will show you how to connect Line 2.

2




First we take the LED Controller Box from Step 1 and an extension cable, labeled "Line 2 Start".

3




Connect the male end of the extension cable, labeled “Line 2 Start” to the first outlet in the LED Control Box.

4

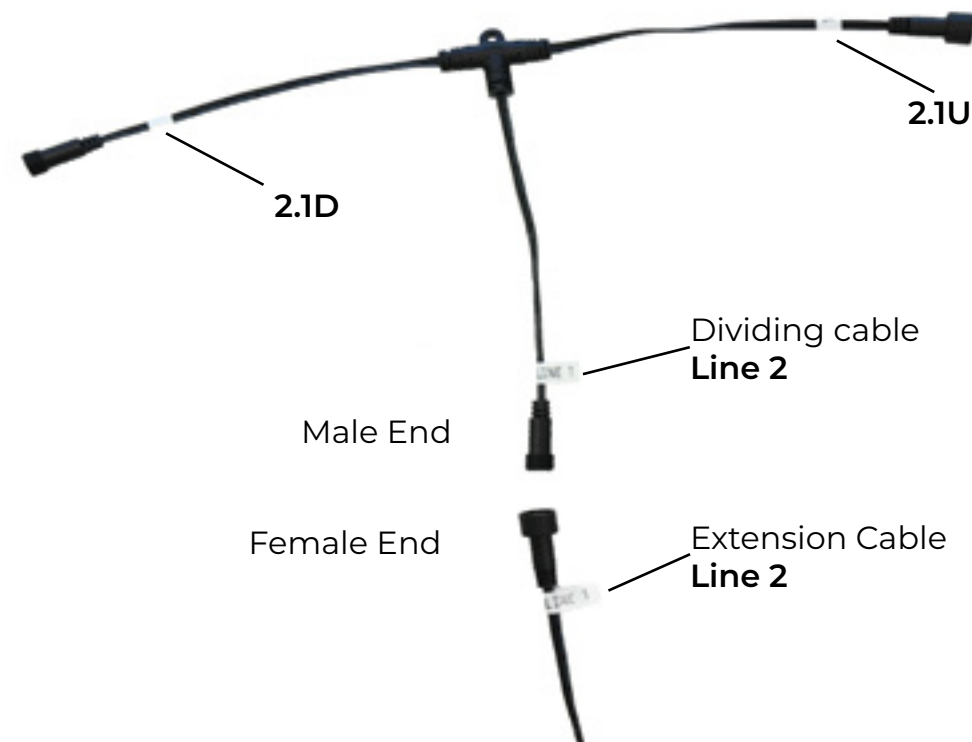


Take one of the dividing cables and connect it to the other end of the Line 2 extension cable. You will see that the diving cable has two more outlets labeled 2.1 D and 2.1 U.

5

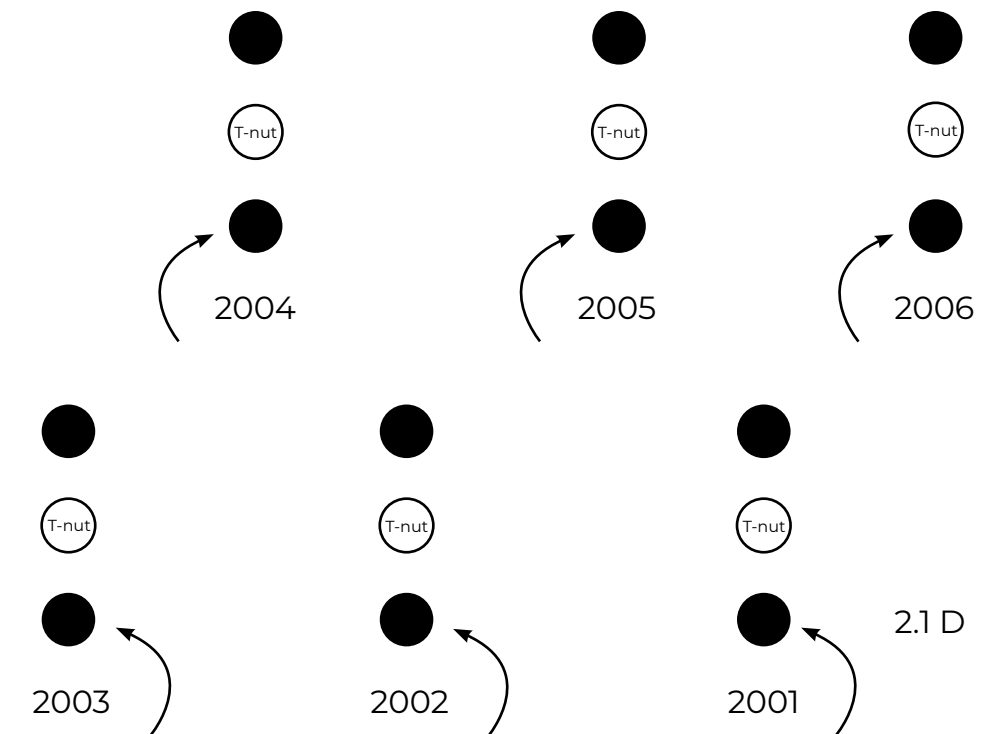

Let's first connect the 2.1 D LEDs, the D is for DOWN. All of the LEDs connected have to be inserted below the t-nut. The LED Cord you will need next is 2.2 D and you need to continue inserting the LEDs below the t-nut. Until the last LED on the line, which will be labelled 2.3 D END.

6

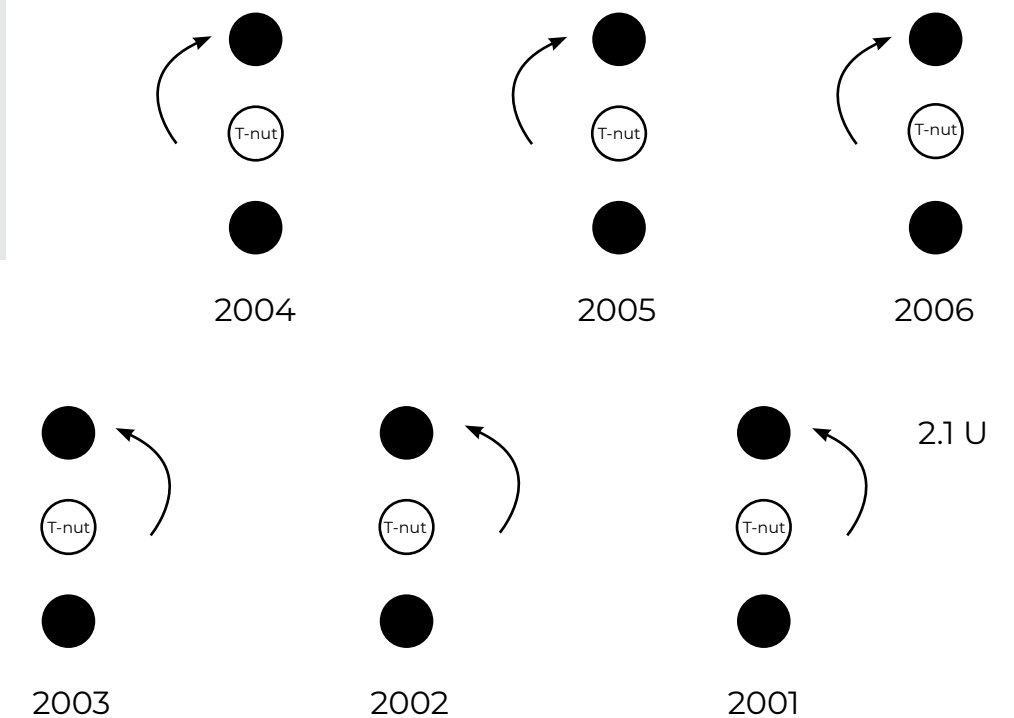

Now after we are ready with line 2.1 DOWN, we have to connect line 2.1 UP. The first LED Cord you will take will be labelled 2.1 U and 2.2U, then 2.2 U and 3.3 U END. All the LEDs on this line have to be connected above the t-nut. After you are ready with all the lines just plugin the power cable into the LED Controller.

